 


Item # 83263

USE AND CARE GUIDE

73" XL HUTCH

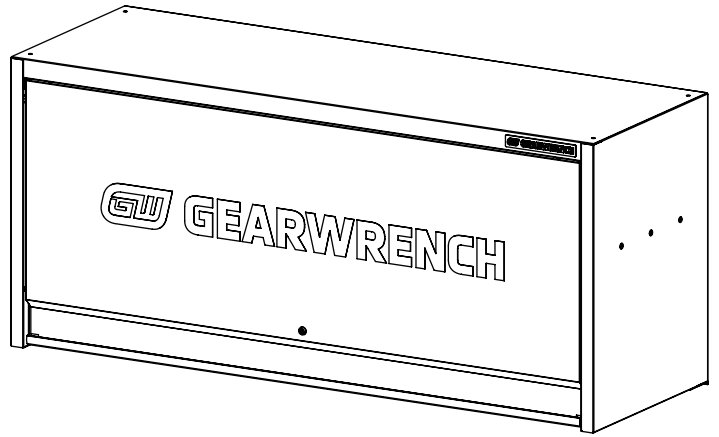

Safety Information

1. To reduce the risk of injury, please read and follow the safety instructions below before assembling and using this product.
2. Two or more people are required for the assembly of this product.
3. Secure this product properly before moving it with a forklift.
4. Do not tow the product with power equipment.
5. Do not alter this product in any manner. For example, do not weld external lock bars or attach electrical equipment.
6. Before locking the hutch, ensure there are no obstructions in order for the door to completely close and lock bars to work properly.



CAUTION: Keep the product on level surfaces. The product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.



CAUTION: Lock the door before moving this product. The door could come open and make the product unstable, which may cause personal injury or product damage.



CAUTION: Do not attach or mount this product to a vehicle or mobile trailers. This may cause personal injury or product damage. Mounting this product to any vehicle or mobile trailers in any manner will void warranty.



CAUTION: Do not stand, sit or climb on this product. You may fall which may cause personal injury or product damage.

Electrical Safety

1. Power lead plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
2. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
3. Do not expose to rain or wet conditions. Water entering a electrical products will increase the risk of electric shock.
4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
6. Do not operate powered products in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Powered products create sparks which may ignite the dust or fumes.
7. Keep children and bystanders away while operating any powered products. Distractions can cause you to lose control.

Risk of Electric Shock

- Do Not Overload power boards by "piggy backing" plugs into one socket or by using double adaptors - all power boards have a maximum current rate.
- Do Not Plug high wattage appliances (such as toasters, kettles and heaters) into power boards - plug them directly to permanent power points instead.
- Do Not Use damaged, dirty or wet power boards. Do not expose to chemicals, oils or other liquids.
- Never use water to extinguish a fire caused by electrical equipment. Do not attempt to open the product housing.
- There are no user-serviceable parts inside this product. Do not repair the unit yourself.
- Supervise young children to ensure they do not play with the product.
- Do not expose to naked flames or other heat sources.
- Do not drop or subject the device to undue shock.
- Keep device away from magnets at all times.
- Keep away from direct sunlight. Indoor use only.
- Unplug this device during lightning storms or when unused for long periods of time.

Package Contents



 


HARDWARE INCLUDED

 


NOTE: Hardware not shown to actual size.



NOTE: The keys are taped to the door outside of the unit.

-  __AA
-  __BB
-  __CC
-  __DD
-  __EE

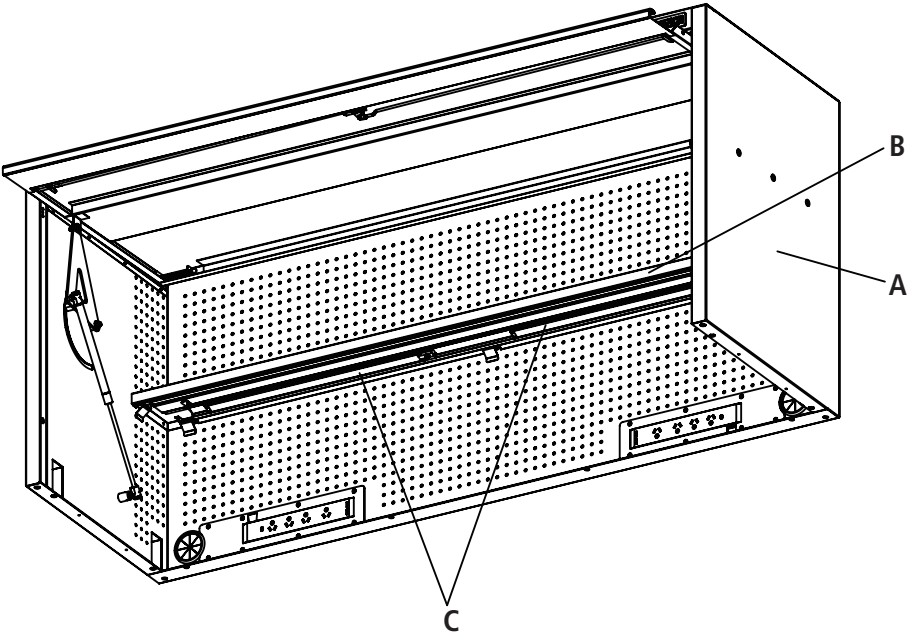

Part	Description	Quantity	Part	Description	Quantity
A	Hutch	1	AA	Hexagon head flange bolt (M6 x 48mm)	8
B	Shelf	1	BB	Shelf clip	5
C	LED Light	2	CC	Storage hook	4
			DD	M6 x 16 bolt	8
			EE	Cable clip	6

 
Assembly

1 Attach the Hutch to the Workbench

 
 
 


CAUTION: Four people are required for assembly.

- There are 8 pre-drilled holes on the stainless steel of 72 in - 17 Drawer Workbench.
- Carefully lift the Hutch (A) and gently place on the Workbench.
- Open the Hutch door and check for proper alignment of the connection holes through the steel work surface. Ensure the Hutch is flush with the front and sides of the Workbench.

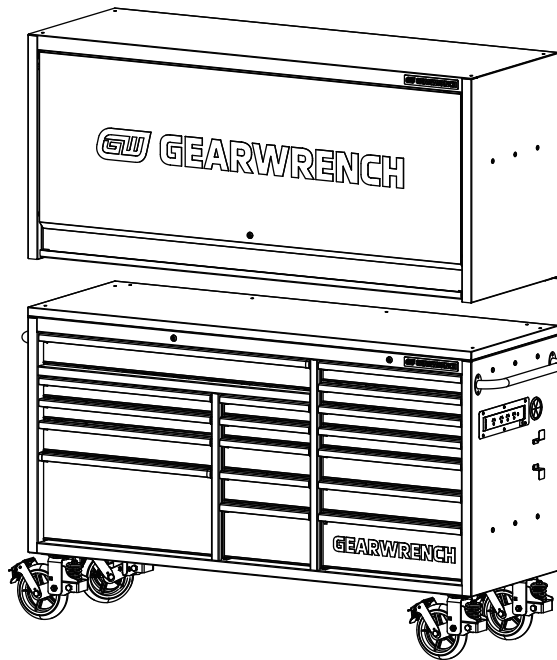 


- Use 8 pcs M6 x 48mm flange bolts (AA) to secure the Hutch along the sides and back to the Workbench. Tighten with a 8mm socket or wrench.
- Be careful not to over tighten.

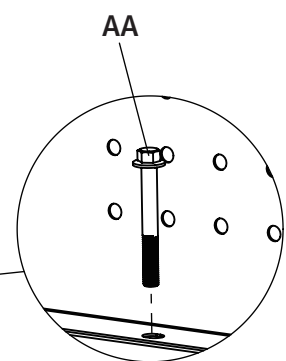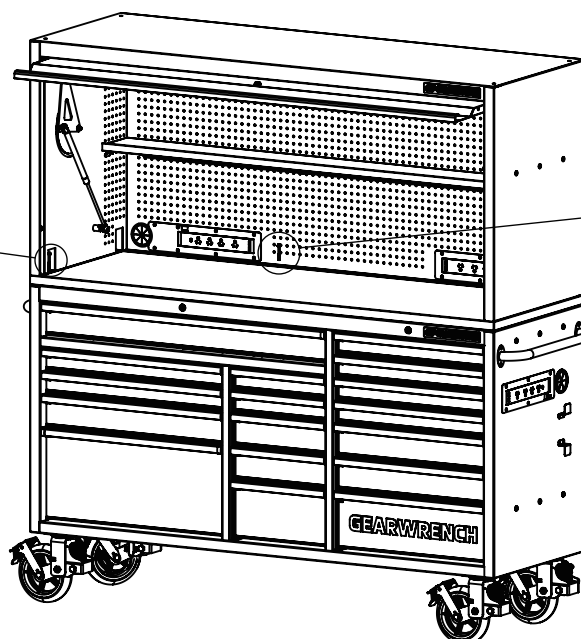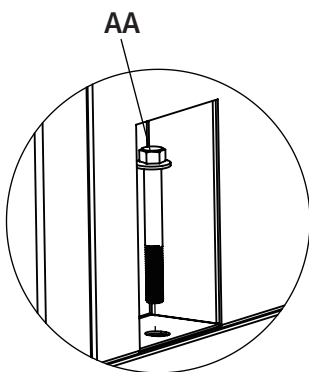 


2 Attach the LED lights

- The LED lights have been pre-installed on the shelf. Remove any packing materials and the nylon cable ties bundled at both ends of the LED light.

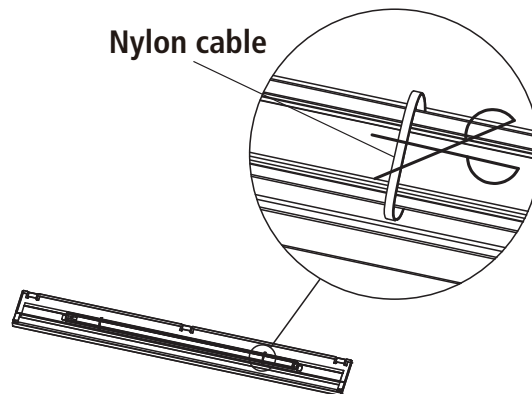 


- Insert the power cable into the end of the LED fixture by the power switch.
Note: The back of the LED fixture is magnetic and attaches directly to the articulating holder under the shelf.

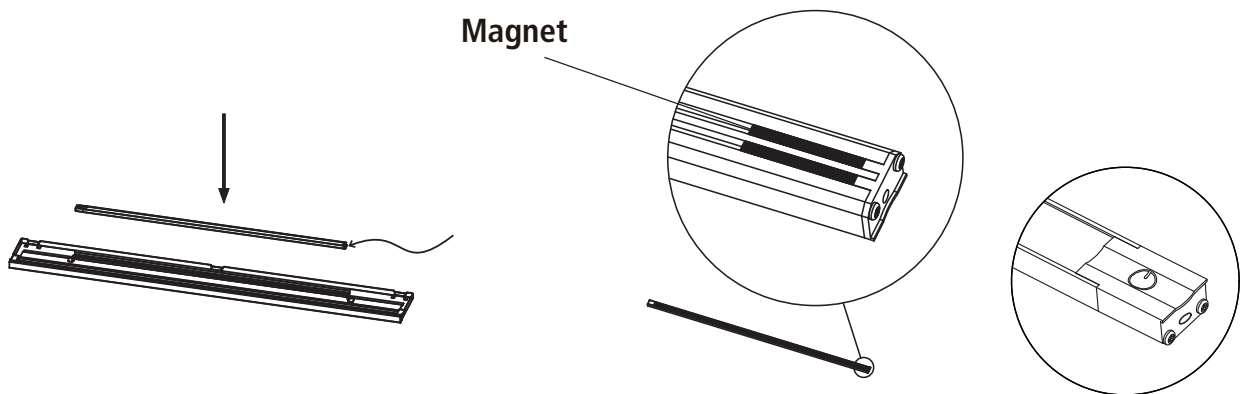 


3 Attach the Shelf in the Hutch

- Put the Shelf (B) into the inner cavity of Hutch (A) at the desired height and install the 5 pcs Shelf Clips (BB) to the pegboard to align with the notches in the Shelf.

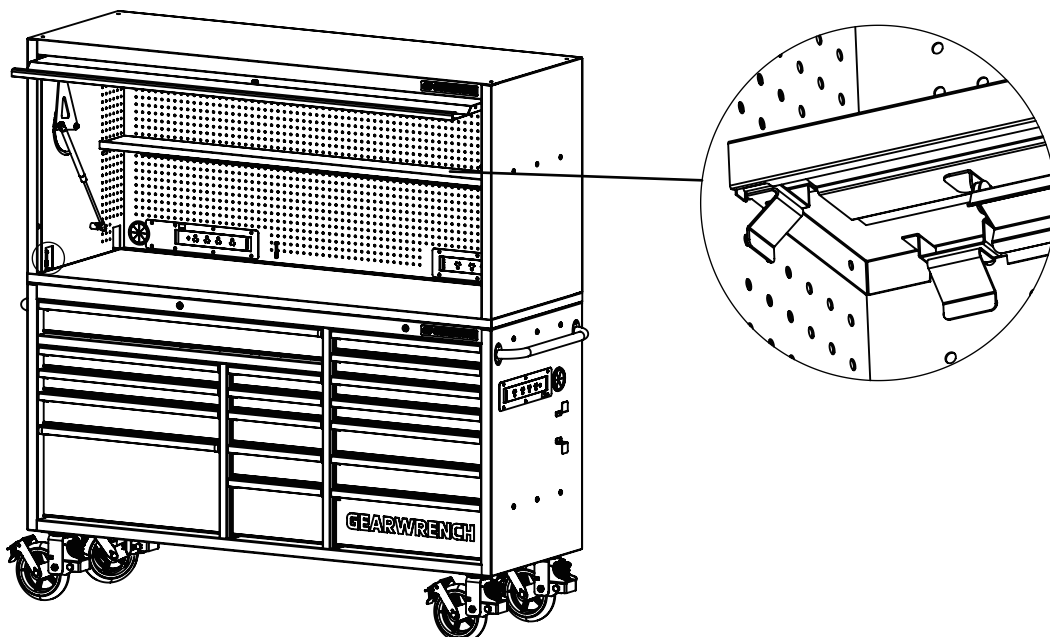 


- Use the Cable clips (EE) to attach the power cord from the LED light and route the wire along the backwall.

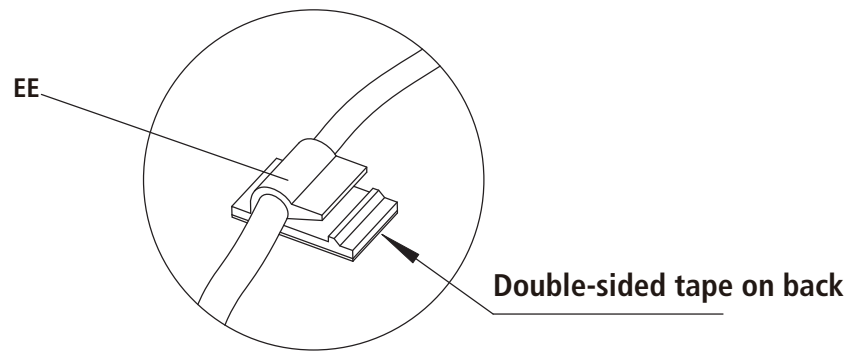

4 Attach the Storage Hooks

- Attach the Storage Hooks (CC) for the power cord on the back of the Hutch with 8 pcs bolt (DD).

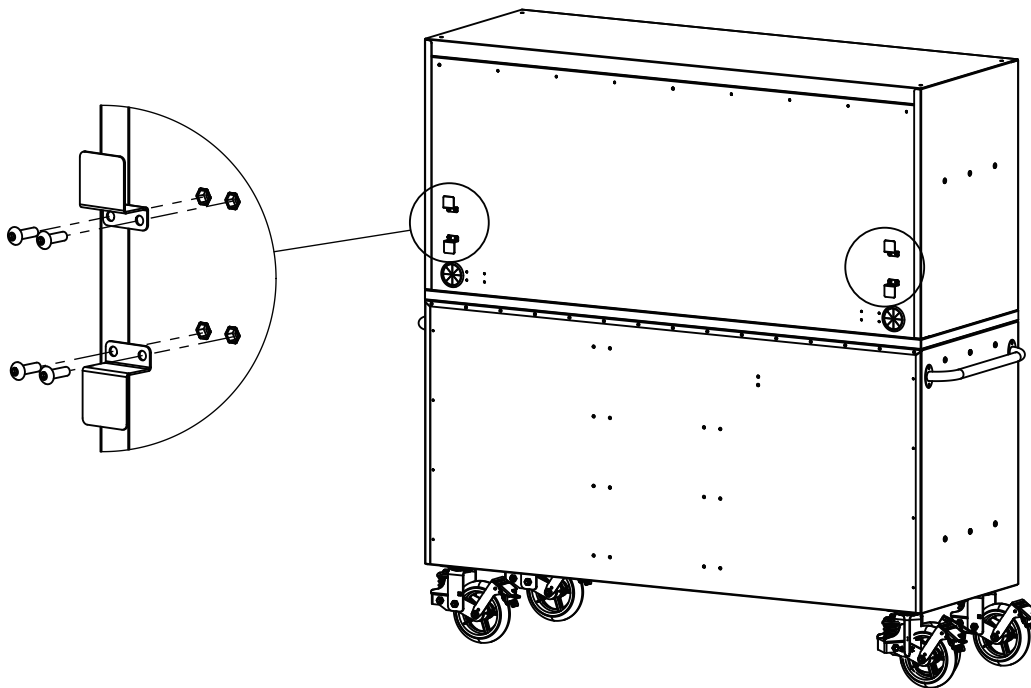

Care and Cleaning

- Periodically clean the drawer fronts, drawer trim, and other surfaces with a mild detergent and water.
- Auto wax preserves the storage unit's luster finish and protects against scratches. Apply the wax as you would on a car.
- Remove grease and oil with a standard nonflammable cleaning fluid.

For damaged or missing parts, please call 02 6021 6666.